

BeoCom 2400 is an advanced telephone in a modern and user-friendly design

The operation and the settings of the telephone are done by means of a menu operated dialogue

One of the many advanced functions is the built-in directory where you can store up to 121 telephone numbers with names attached and, of course, it is possible to add and delete telephone numbers/names in the directory. As the telephone automatically asks if you wish to store the number that you have just used, it is easy to fill in the directory.

BeoCom 2400 can be provided with a two buttons add-on module for infrared remote control of the volume function used in all recent Bang & Olufsen products.


INSTALLATION ↓

 
INSTALLATION

BATTERIES


The three batteries supplied have to be inserted in the compartment at the bottom of the table base. The batteries are used for the loudspeaking function and for programming only, while the memory is independent of the batteries. Unplug the telephone wall cord before opening the battery cover.


THE HANDSET

The telephone is provided with a magnetic switch which disconnects the telephone line when the handset is placed in the table base as indicated on the drawing. Alternatively, press the  button if a new dial tone is required.

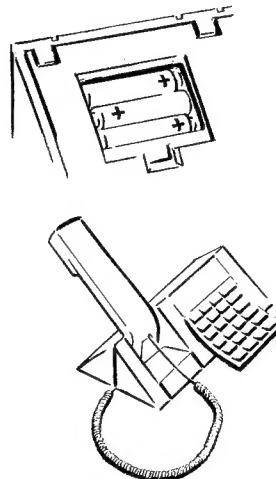


HANDSFREE

 The telephone can be used handsfree. Place the handset in front of the table base and press 

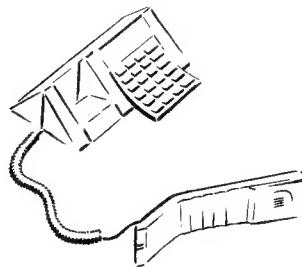

MENU OVERVIEW

 A menu overview is placed under the lid at the rear of the table base

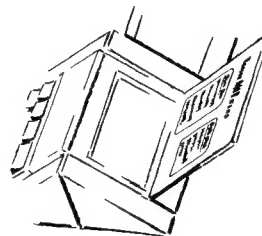

MENU SURVEY

MAIN MENU

- 1 STORE ENTRY
- 2 EDIT ENTRY
- 3 DELETE ENTRY
- 4 DELETE REDIAL
- 5 RINGER ON/OFF
- 6 RINGER LEVEL
- 7 RINGER MELODY
- 8 PRESET VOLUME
- * SETUP MENU

FUNCTION

- Storing a new name/number
- Editing a stored name/number
- Deleting a stored name/number
- Deleting the telephone numbers in redial
- Disconnecting/connecting the tone ringer
- Setting the tone ringer level
- Setting the tone ringer melody
- Presetting the volume of the handset and loudspeaker

SETUP MENU

CALL TIME

AUTO CURSOR

MEMORY ACCESS

REDIAL KEY

SWITCHBOARD

DIAL MODE

CONTRAST

FUNCTION

Connecting/disconnecting the talktime function

Moving the cursor automatically

Searching access only to the directory

Disconnecting/connecting the redial function

Storing the public line prefix

Dial mode setting

Adjusting the display contrast

MENU SURVEY

KEYPAD FUNCTIONS ↓

KEYPAD FUNCTIONS

- | | |
|------------------|--|
| Clear | <ul style="list-style-type: none">• Press Clear to delete the latest entry• Press and hold Clear until the display is off to cancel the function in progress |
| < > | <ul style="list-style-type: none">• Shift between the menu settings• Search in the directory• Move the cursor when editing name/number in the directory• Set the volume during a conversation |
| Menu | <ul style="list-style-type: none">• Activate the menu dialogue |
| Enter | <ul style="list-style-type: none">• Activate the menu setting/menu function• Store name/number |
| Pause | <ul style="list-style-type: none">• Insert pause between a telephone number and an extension number• Insert space when editing name/number in the directory• Search for a letter block of a name |
| Memory | <ul style="list-style-type: none">• Directory |
| Redial | <ul style="list-style-type: none">• Show the telephone numbers in redial• Perform a call• Release pause when performing a call |

0 9, *, □

🔊

↶

🎧

- Dial a phone number
- Enter a name Letters are selected by pressing the appropriate key one, two, three or four times
- Connect/disconnect the loudspeaker
- Get a new dial tone when handset is lifted
- Disconnect current function and erases the display
- Disconnecting/connecting the microphone





RINGER EQUIVALENT NUMBER

A PSTN Exchange Line has a maximum REN capacity of 4. When you add up the REN values of your telephones, etc. they should not exceed 4. Your new telephone has a REN of 1. A BT provided telephone is assumed to have a REN of 1 unless otherwise marked. If you exceed the REN capacity one or more of the ringers may not function correctly.

Note: Because of the range of ringing detector characteristics, a guarantee of successful operation in an installation of mixed types of ringing detectors cannot be given by any supplier.

DISPLAY

Symbols

- | | |
|---|--|
| P | • Storing or editing a name/number in the directory |
| S | • Searching in the directory |
|  | • Is on when the loudspeaker is connected |
|  | • Flashes when the microphone is muted |
|  | • Is on during an incoming call
• Flashes when the toner/ringer is disconnected |
|  | • Flashes when the batteries are low |

Please note! The display switches off when the telephone has not been used for 30 seconds

DISPLAY

BeoCom 2400 memorizes 121 telephone numbers and names. Each name can have up to 16 characters and each number 48 digits.

Entering names

Enter the phone number or

Press	Enter
Enter	the name

[illegible][illegible]

Read the section SWITCHBOARD before storing

STORING DURING A CALL

Press **Menu**

MENU 1
STORE ENTRY

Press **Enter**
the phone number

FREE ENTRIES: 121 F
ENTER NUMBER

Press **Enter**
the name

ENTER NAME
: number >

Press **Enter**

STORED
: name : : : number : 5

If a dialled telephone number is not stored in the directory it can be stored right after the call when STORE ENTRY is shown in the display

STORING RIGHT AFTER A CALL

The display shows

STORE ENTRY 2
: number :

Press **Enter**
the name

ENTER NAME
: number :

Press **Enter**

STORED
: name : : : number : 5

When there is no space in the directory MEMORY FULL is shown in the display. An existing phone number has to be deleted before a new number can be stored.

THE TELEPHONE'S MEMORY (DIRECTORY)

SEARCHING IN THE DIRECTORY – MAKING A CALL

Names and phone numbers in the directory are arranged as follows

- Storings without names
- Names starting with & - /
- Names starting with digits
- Names arranged alphabetically (Ä Ö U Æ Ø Å in the end)

If a phone number exceeds 16 characters only the first 15 characters are shown. The symbol > is shown at last.

SEARCHING IN THE DIRECTORY WITH HANDSET ON-HOOK

Press > to search forward
Press < to search backward

SEARCHING ON INITIAL LETTER

Press **Memory**
[View Article Online](#)
[DOI: 10.1080/09658210701430000](#)
[http://www.informaworld.com](#)

Press	the first letter of the name	The first name with the dialled initial letter is shown in the display
-------	------------------------------	--

Press **>** Search forward until the name/number is shown

Press a new initial letter, if necessary

By searching on more letters (a letter block)
the entered letters just have to be contained
in the name

SEARCHING ON MORE LETTERS

Press **Memory**
Press the first letter
Press **Pause**
Press the second letter
Press **Pause**
Press the third letter

ENTER LETTER

– maximum four letters of a name can be entered

Press > Search forward until the name/number is
shown

DIALLING A DISPLAYED PHONE NUMBER

Lift the handset, *or* press 
Press **Redial**

SEARCHING IN THE DIRECTORY – MAKING A CALL

EDITING / DELETING ↓

EDITING

A name/number in the directory can be edited by

- adding a character
- writing over a character
- deleting a character with **Clear**
- inserting a space with **Pause**

Deleting entries

Press and hold **Clear** until the display is off

EDITING A NAME/NUMBER IN THE DIRECTORY

Search forward until the name/number is shown.

```
Press  Menu, 2      MENU 2
                   : EDIT ENTRY :
```

Press Enter

Move the cursor with < > to the place you want to edit

Edit the name/number

```
Press      Enter      STORED
              : name > : : number : S
```

DELETING

DELETING A NAME/NUMBER IN THE DIRECTORY

Search forward to the name/number to delete

Press **Menu, 3**

MENU 7

: FIRM COUNTRY :

Press **Enter**

MILF MEY?

[illegible]

Press Enter

[illegible]

1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. 12. 13. 14. 15. 16. 17. 18. 19. 20. 21. 22. 23. 24. 25. 26. 27. 28. 29. 30. 31. 32. 33. 34. 35. 36. 37. 38. 39. 40. 41. 42. 43. 44. 45. 46. 47. 48. 49. 50. 51. 52. 53. 54. 55. 56. 57. 58. 59. 60. 61. 62. 63. 64. 65. 66. 67. 68. 69. 70. 71. 72. 73. 74. 75. 76. 77. 78. 79. 80. 81. 82. 83. 84. 85. 86. 87. 88. 89. 90. 91. 92. 93. 94. 95. 96. 97. 98. 99. 100. 101. 102. 103. 104. 105. 106. 107. 108. 109. 110. 111. 112. 113. 114. 115. 116. 117. 118. 119. 120. 121. 122. 123. 124. 125. 126. 127. 128. 129. 130. 131. 132. 133. 134. 135. 136. 137. 138. 139. 140. 141. 142. 143. 144. 145. 146. 147. 148. 149. 150. 151. 152. 153. 154. 155. 156. 157. 158. 159. 160. 161. 162. 163. 164. 165. 166. 167. 168. 169. 170. 171. 172. 173. 174. 175. 176. 177. 178. 179. 180. 181. 182. 183. 184. 185. 186. 187. 188. 189. 190. 191. 192. 193. 194. 195. 196. 197. 198. 199. 200. 201. 202. 203. 204. 205. 206. 207. 208. 209. 210. 211. 212. 213. 214. 215. 216. 217. 218. 219. 220. 221. 222. 223. 224. 225. 226. 227. 228. 229. 230. 231. 232. 233. 234. 235. 236. 237. 238. 239. 240. 241. 242. 243. 244. 245. 246. 247. 248. 249. 250. 251. 252. 253. 254. 255. 256. 257. 258. 259. 260. 261. 262. 263. 264. 265. 266. 267. 268. 269. 270. 271. 272. 273. 274. 275. 276. 277. 278. 279. 280. 281. 282. 283. 284. 285. 286. 287. 288. 289. 290. 291. 292. 293. 294. 295. 296. 297. 298. 299. 300. 301. 302. 303. 304. 305. 306. 307. 308. 309. 310. 311. 312. 313. 314. 315. 316. 317. 318. 319. 320. 321. 322. 323. 324. 325. 326. 327. 328. 329. 330. 331. 332. 333. 334. 335. 336. 337. 338. 339. 340. 341. 342. 343. 344. 345. 346. 347. 348. 349. 350. 351. 352. 353. 354. 355. 356. 357. 358. 359. 360. 361. 362. 363. 364. 365. 366. 367. 368. 369. 370. 371. 372. 373. 374. 375. 376. 377. 378. 379. 380. 381. 382. 383. 384. 385. 386. 387. 388. 389. 390. 391. 392. 393. 394. 395. 396. 397. 398. 399. 400. 401. 402. 403. 404. 405. 406. 407. 408. 409. 410. 411. 412. 413. 414. 415. 416. 417. 418. 419. 420. 421. 422. 423. 424. 425. 426. 427. 428. 429. 430. 431. 432. 433. 434. 435. 436. 437. 438. 439. 440. 441. 442. 443. 444. 445. 446. 447. 448. 449. 450. 451. 452. 453. 454. 455. 456. 457. 458. 459. 460. 461. 462. 463. 464. 465. 466. 467. 468. 469. 470. 471. 472. 473. 474. 475. 476. 477. 478. 479. 480. 481. 482. 483. 484. 485. 486. 487. 488. 489. 490. 491. 492. 493. 494. 495. 496. 497. 498. 499. 500. 501. 502. 503. 504. 505. 506. 507. 508. 509. 510. 511. 512. 513. 514. 515. 516. 517. 518. 519. 520. 521. 522. 523. 524. 525. 526. 527. 528. 529. 530. 531. 532. 533. 534. 535. 536. 537. 538. 539. 540. 541. 542. 543. 544. 545. 546. 547. 548. 549. 550. 551. 552. 553. 554. 555. 556. 557. 558. 559. 560. 561. 562. 563. 564. 565. 566. 567. 568. 569. 570. 571. 572. 573. 574. 575. 576. 577. 578. 579. 580. 581. 582. 583. 584. 585. 586. 587. 588. 589. 590. 591. 592. 593. 594. 595. 596. 597. 598. 599. 600. 601. 602. 603. 604. 605. 606. 607. 608. 609. 610. 611. 612. 613. 614. 615. 616. 617. 618. 619. 620. 621. 622. 623. 624. 625. 626. 627. 628. 629. 630. 631. 632. 633. 634. 635. 636. 637. 638. 639. 640. 641. 642. 643. 644. 645. 646. 647. 648. 649. 650. 651. 652. 653. 654. 655. 656. 657. 658. 659. 660. 661. 662. 663. 664. 665. 666. 667. 668. 669. 670. 671. 672. 673. 674. 675. 676. 677. 678. 679. 680. 681. 682. 683. 684. 685. 686. 687. 688. 689. 690. 691. 692. 693. 694. 695. 696. 697. 698. 699. 700. 701. 702. 703. 704. 705. 706. 707. 708. 709. 710. 711. 712. 713. 714. 715. 716. 717. 718. 719. 720. 721. 722. 723. 724. 725. 726. 727. 728. 729. 730. 731. 732. 733. 734. 735. 736. 737. 738. 739. 740. 741. 742. 743. 744. 745. 746. 747. 748. 749. 750. 751. 752. 753. 754. 755. 756. 757. 758. 759. 760. 761. 762. 763. 764. 765. 766. 767. 768. 769. 770. 771. 772. 773. 774. 775. 776. 777. 778. 779. 780. 781. 782. 783. 784. 785. 786. 787. 788. 789. 790. 791. 792. 793. 794. 795. 796. 797. 798. 799. 800. 801. 802. 803. 804. 805. 806. 807. 808. 809. 810. 811. 812. 813. 814. 815. 816. 817. 818. 819. 820. 821. 822. 823. 824. 825. 826. 827. 828. 829. 830. 831. 832. 833. 834. 835. 836. 837. 838. 839. 840.

Regret deleting

Press Clear

The subsequent name/number in the directory is shown

REDIALLING

BeoCom 2400 memorizes the last 9 phone numbers dialled. Each number can have up to 48 characters.


REDIALLING THE LAST NUMBER DIALLED

With handset off-hook and the display off

Press **Redial** 

DIALLING A NUMBER FROM REDIAL

With handset on-hook

Press **Redial**  until the number required is shown in the display

Lift the handset, or press 

Press **Redial**

Please note! Deleting numbers in redial will result in all phone numbers in redial being deleted

DELETING THE NUMBERS IN REDIAL

| | | |
|-------|----------------|------------------------------|
| Press | Menu, 4 | Menu 4
: DELET REDIAL : |
| Press | Enter | DELET REDIAL : |
| Press | Enter | DELET REDIAL
DELET REDIAL |

As a safety precaution while using a telephone service the digits pressed after * and # are not stored in redial

REDIALLING

USING THE PAUSE BUTTON ↓

USING THE PAUSE BUTTON

If, when making a call, it is necessary to wait for a new dial tone before dialling the 2nd part of the number a pause must be inserted

The pause must be inserted by manual calls as well as by entering numbers into the directory

A new dial tone may occur by e.g. foreign numbers, telephone services and numbers followed by an extension number

STORING WITH ONE PAUSE

Press **Menu**

MENU 1
: STORE ENTRY :

Press **Enter**
Enter 1st part of the phone number

FREET ENTRIES: 121 F
ENTER NUMBER

Press **Pause**
Enter 2nd part of the phone number

Press **Enter**
Enter the name

ENTER NAME F
: number :

Press **Enter**

STORED
: name > : : number : 0

DIALLING WITH STORED PAUSE

Get a phone number from the directory or redial

Press **Redial**
(1st part of the phone number is transmitted)

Wait for the dial tone

Press **Redial**
(2nd part of the phone number is transmitted)

If two or more pauses are stored, the extension number is transmitted automatically

Press **Pause** twice and you obtain a one second's pause. Each additional press on **Pause** adds a one second's pause. The duration of the pause must correspond to the delay from the phone number is transmitted until you obtain a new dial tone. However, this delay may vary from call to call.

Display with one pause

Display with two pauses

==

TONE RINGER

The tone ringer can be disconnected either temporarily (TEMPORARY OFF) or continuously (OFF)

When the tone ringer is disconnected a flashing  is shown in the display

DISCONNECTING/CONNECTING THE TONE RINGER

Press **Menu, 5**

Menu 5
: RINGER OFF :
: RINGER ON :

Press **Enter**

RINGER OFF
: RINGER ON :

Press **< >**

to select the setting to your choice


Press **Enter**

RINGER ON
: RINGER OFF :

If the tone ringer is disconnected reconnection is done by lifting the handset and placing it in the table base again

The tone ringer has four levels

- INCREASING
- LOW
- MEDIUM
- LOUD

While setting the levels are audible when  is pressed

The tone ringer has four quick and four slow melodies

- SLOW
- FAST

Setting the tones, pressing the  enables the tones to be heard

TONE RINGER

SETTING THE TONE RINGER LEVEL

Press **Menu, 6**

MENU 6
: RINGER LEVEL >

Press **Enter**

RINGER LEVEL
: LOUD >

Press **< >**

to select the setting to your choice

Press **Enter**

STORED
MEDIUM

SETTING THE TONE RINGER MELODY

Press **Menu, 7**

MENU 7
: RINGER MELODY :

Press **Enter**

RINGER MELODY
: SLOW 1 :

Press **< >**

to select the setting to your choice

Press **Enter**

STORED
FAST 2

VOLUME

SETTING THE VOLUME

Press > to increase the volume
Press < to decrease the volume

The telephone can be preset to start all calls at the same volume

PRESETTING THE VOLUME

Press **Menu, 8**

MENU 8
: PRESET VOLUME :

Press **Enter**

PRESET VOLUME
: OFF :

Press > until ON is shown in the display

PRESET VOLUME
: OFF >

Press **Enter**

Press < > to select the volume to your choice

Press **Enter**

STORED
[|||||] [|||||] [|||||] [|||||] [|||||] [|||||] [|||||] [|||||] [|||||] [|||||]

MICROPHONE

The microphone can be muted temporarily so that you can make an aside to somebody else in the room without the person at the other end hearing you

A beep signal indicates that the microphone is muted

DISCONNECTING THE MICROPHONE

Press   flashes

CONNECTING THE MICROPHONE

Press 

LOUDSPEAKER

Other people can listen to the conversation with the loudspeaker connected

CONNECTING THE LOUDSPEAKER

Press   is on

DISCONNECTING THE LOUDSPEAKER

Press 

VOLUME

MICROPHONE

LOUDSPEAKER

SETUP MENU

Access to the setup menu

Press **Menu, ***

MENU *
: SETUP MENU :

Press **Enter**

SETUP MENU
: CALL TIME :

In the setup menu the following functions are now available

CONNECTING/DISCONNECTING THE TALKTIME FUNCTION

The duration of a call is displayed in minutes and seconds

Press **>**

until CALL TIME is shown in the display

This function is not connected from the factory

Press **Enter**

CALL TIME
< OFF >

Press **<>**

to select the setting to your choice

Press **Enter**

STORED
ON

MOVING THE CURSOR AUTOMATICALLY

By entering letters the cursor can move automatically after 1.5 secs. By this you omit to press > to get more letters from one key

- Manual moving (NO)
- Automatic moving (YES)

Press >

until AUTO CURSOR is shown in the display

Press Enter

AUTO CURSOR
: NO :

Press < >

to select the setting to your choice

Press Enter
1
9

STARTED
: YES :

RESTRICTED ACCESS TO THE DIRECTORY

Access to the directory can be restricted to searching only

- Complete access (NORMAL)
- Access for searching only (SEARCH ONLY)

Press >

until MEMORY ACCESS is shown in the display

Press Enter

MEMORY ACCESS
: NORMAL :

Press < >

to select the setting to your choice

Press Enter

STARTED
: SEARCH ONLY :

SETUP MENU

DISCONNECTING/CONNECTING THE REDIAL FUNCTION

Please note! Disconnecting the redial function will result in all phone numbers in redial being deleted

Press >

until REDIAL KEY is shown in the display

Press **Enter**

REDIAL KEY
: NORMAL :

Press < >

to select the setting to your choice

Press **Enter**

STORED
OFF

DIAL MODE SETTING

The dial mode can be set to TONE or PULSE and can be combined with the R-key function FLASH or EARTH. The correct setting depends on the type of telephone line

Press >

until DIAL MODE is shown in the display

Press **Enter**

DIAL MODE
: TONE FLASH :

Press < >

to select the setting to your choice

Press **Enter**

STORED
PULSE EARTH

ADJUSTING THE DISPLAY CONTRAST

Press >

until CONTRAST is shown in the display

Press Enter



Press < >

to select the setting to your choice

Press Enter



SWITCHBOARD

If BeoCom 2400 is connected to a switchboard it is often necessary to enter a pause between the public line prefix and the telephone number

BeoCom 2400 inserts this pause automatically when it is once stored into the telephone together with the public line prefix

STORING THE PREFIX

Enter setup menu
Press >

until SWITCHBOARD is shown in the display

Press **Enter**

SWITCHBOARD
: UNIT :

Press < >

until YES is shown in the display

Press **Enter**

SWITCHBOARD
CODE :

Press the prefix

Press **Enter**

PAUSE
: UNIT :

Press < >

to select the pause required *)

Press **Enter**

STORED
SWITCHBOARD

*) The pause between the prefix and the telephone number can be set from one to twelve seconds or you can enter a stop (WAIT)

1111


until SWITCHBOARD is shown in the display

[illegible]

until NO is shown in the display

2017
 2018
 2019
 2020
 2021
 2022
 2023
 2024
 2025
 2026
 2027
 2028
 2029
 2030
 2031
 2032
 2033
 2034
 2035
 2036
 2037
 2038
 2039
 2040
 2041
 2042
 2043
 2044
 2045
 2046
 2047
 2048
 2049
 2050
 2051
 2052
 2053
 2054
 2055
 2056
 2057
 2058
 2059
 2060
 2061
 2062
 2063
 2064
 2065
 2066
 2067
 2068
 2069
 2070
 2071
 2072
 2073
 2074
 2075
 2076
 2077
 2078
 2079
 2080
 2081
 2082
 2083
 2084
 2085
 2086
 2087
 2088
 2089
 2090
 2091
 2092
 2093
 2094
 2095
 2096
 2097
 2098
 2099
 2100
 2101
 2102
 2103
 2104
 2105
 2106
 2107
 2108
 2109
 2110
 2111
 2112
 2113
 2114
 2115
 2116
 2117
 2118
 2119
 2120
 2121
 2122
 2123
 2124
 2125
 2126
 2127
 2128
 2129
 2130
 2131
 2132
 2133
 2134
 2135
 2136
 2137
 2138
 2139
 2140
 2141
 2142
 2143
 2144
 2145
 2146
 2147
 2148
 2149
 2150
 2151
 2152
 2153
 2154
 2155
 2156
 2157
 2158
 2159
 2160
 2161
 2162
 2163
 2164
 2165
 2166
 2167
 2168
 2169
 2170
 2171
 2172
 2173
 2174
 2175
 2176
 2177
 2178
 2179
 2180
 2181
 2182
 2183
 2184
 2185
 2186
 2187
 2188
 2189
 2190
 2191
 2192
 2193
 2194
 2195
 2196
 2197
 2198
 2199
 2200
 2201
 2202
 2203
 2204
 2205
 2206
 2207
 2208
 2209
 2210
 2211
 2212
 2213
 2214
 2215
 2216
 2217
 2218
 2219
 2220
 2221
 2222
 2223
 2224
 2225
 2226
 2227
 2228
 2229
 2230
 2231
 2232
 2233
 2234
 2235
 2236
 2237
 2238
 2239
 2240
 2241
 2242
 2243
 2244
 2245
 2246
 2247
 2248
 2249
 2250
 2251
 2252
 2253
 2254
 2255
 2256
 2257
 2258
 2259
 2260
 2261
 2262
 2263
 2264
 2265
 2266
 2267
 2268
 2269
 2270
 2271
 2272
 2273
 2274
 2275
 2276
 2277
 2278
 2279
 2280
 2281
 2282
 2283
 2284
 2285
 2286
 2287
 2288
 2289
 2290
 2291
 2292
 2293
 2294
 2295
 2296
 2297
 2298
 2299
 2300
 2301
 2302
 2303
 2304
 2305
 2306
 2307
 2308
 2309
 2310
 2311
 2312
 2313
 2314
 2315
 2316
 2317
 2318
 2319
 2320
 2321
 2322
 2323
 2324
 2325
 2326
 2327
 2328
 2329
 2330
 2331
 2332
 2333
 2334
 2335
 2336
 2337
 2338
 2339
 2340
 2341
 2342
 2343
 2344
 2345
 2346
 2347
 2348
 2349
 2350
 2351
 2352
 2353
 2354
 2355
 2356
 2357
 2358
 2359
 2360
 2361
 2362
 2363
 2364
 2365
 2366
 2367
 2368
 2369
 2370
 2371
 2372
 2373
 2374
 2375
 2376
 2377
 2378
 2379
 2380
 2381
 2382
 2383
 2384
 2385
 2386
 2387
 2388
 2389
 2390
 2391
 2392
 2393
 2394
 2395
 2396
 2397
 2398
 2399
 2400
 2401
 2402
 2403
 2404
 2405
 2406
 2407
 2408
 2409
 2410
 2411
 2412
 2413
 2414
 2415
 2416
 2417
 2418
 2419
 2420
 2421
 2422
 2423
 2424
 2425
 2426
 2427
 2428
 2429
 2430
 2431
 2432
 2433
 2434
 2435
 2436
 2437
 2438
 2439
 2440
 2441
 2442
 2443
 2444
 2445
 2446
 2447
 2448
 2449
 2450
 2451
 2452
 2453
 2454
 2455
 2456
 2457
 2458
 2459
 2460
 2461
 2462
 2463
 2464
 2465
 2466
 2467
 2468
 2469
 2470
 2471

TROUBLE SHOOTING

| Symptoms | Possible cause | Correction |
|--|--|---|
| The display shows a flashing  | The batteries are low | Insert new batteries |
| The tone ringer does not work | The tone ringer is disconnected | Connect the tone ringer |
| Redialling impossible | <ul style="list-style-type: none"> • Redial disconnected • The prefix is not stored (switchboard) • A pause between 1st part of the phone number and 2nd part of the phone number has not been stored | <ul style="list-style-type: none"> • Connect redial • See SWITCHBOARD • See USING THE PAUSE BUTTON |
| Storing and editing name/numbers in the directory does not work | The access to the directory is set to SEARCH ONLY | Set the access to NORMAL |

TECHNICAL INFORMATION

LOCATION

Do not place the telephone in a dusty or dirty room Do not expose the telephone to excessive moisture

DATA

Power supply

REN factor

Batteries

Ambient temperature

Relative humidity

Dimensions

Weight of handset

Total weight

from the telephone network

1

3 x 1.5 V, type AAA

−25°C to +55°C

0°C to +55°C

15% to 95%

175 mm

195 mm

165 mm

115 g

600 g

the telephone
the display

height
width
depth

CLEANING

Use a soft cloth dipped in water containing a few drops of mild detergent

Your BeoCom 2400 may only be connected to the following installations

- a Direct Exchange Lines (DELs) with either loop disconnect or multifrequency signalling facilities, i.e. a line connected directly to a telephone exchange with its own exchange number
- b Extensions via all sockets provided for DELs
- c Extensions of Approved PABXs including PABXs which return secondary proceed indication

This telephone must not be connected

- a to a shared service line (party line)
- b as an extension to a payphone
- c to a 1 + 1 carrier system

It is not possible to guarantee correct operation under all possible conditions on all compatible PBXs. If difficulty is experienced contact your telephone supplier for advice.

BeoCom 2400 has been approved for the use of the following facilities

Simple Telephone

Loudspeaking – Call Progress Monitor

Loop Disconnect Signalling

Multi Frequency Signalling

PBX earth register recall

PBX timed break register recall

Automatic Dialling

Automatic storage of Last Number Dialed

Storage of telephone numbers for retrieval by a pre-determined code

Any other usage will invalidate the approval of the apparatus if as a result it then ceases to conform to the standards against which approval was granted.

Dialling Emergency Services

This telephone can be used to make a call to the BT Emergency (999) Services

To make a call obtain the PSTN dial tone and dial 999

APPROVED for connection to
telecommunication systems specified
in the instructions for use subject to
the conditions set out in them

S/3524/3/T/503613

Dear Customer,

Your needs as the user of our products are always given careful consideration during the design and development process, and we strive to make our products easy and comfortable to operate

We therefore hope that you will take time to drop us a line, telling us about your experiences with your Bang & Olufsen telephone. Anything which you consider important - positive or negative - may help us in our constant efforts to refine our telephones

| | |
|-----------------|---|
| Please write to | Bang & Olufsen Telecom A/S
Customer's Support
Kjeldsmarkvej 1
DK-7600 Struer |
|-----------------|---|

| | |
|-----------|---|
| or fax to | Bang & Olufsen Telecom A/S
Customer's Support
+45 96 844401 |
|-----------|---|

| | |
|----------------------|-------------------------|
| or send an e-mail to | telecom@bang-olufsen dk |
|----------------------|-------------------------|